

[Toyota, Spark plug & coil replacement]

6th & 7th generation Camry 2.5L (2AZ-FE)

<https://www.bekomcar.com/en/tutorial/pdf/48/>

⚠ When disconnecting the battery, minus terminal first. When connecting the battery, plus terminal first. Use Denso or NGK only. Toyota coil pack connector is rather fragile. So, just remove the bolts and pull all the coils out together without disconnecting the connectors.

Spark plug required is Denso #SK16HR11 with 19Nm (14lbs ft) torque. Remove 10mm nuts and bolts for engine cover, coil pack and battery terminal. Coil pack connectors are very fragile. Use 16mm spark plug socket with 3/8" or 1/2" ratchets.



Tools & torque

1. Spark plug torque is 19Nm (14lbs ft)
2. 10mm nuts or bolts for engine cover, coil pack and battery terminal
3. Torque wrench, 10mm socket
4. Denso spark plug, SK16HR11

Details

1. Disconnect the battery, minus first and then positive terminals
2. Remove the engine cover, two 10mm nuts or just 3 grommits.
3. Remove 10mm bolt to remove coil pack.
4. Extreme care in disconnection will be no good. The clip just would breake.
5. 16mm (5/8") Spark plug socket to remove the spark plugs. Just 5" extension is good enough.

Note. Toyota coil pack connector is rather fragile. So, just remove the bolts and pull all the coils out together without disconnecting the connectors. That is an option as well, use your own judgement.

Coil gasket should be removed as well. Coil order does not matter. Some recent models need 14mm socket with 8mm coil pack nuts. Genuine spark plugs come with pre gapped.

(1) Remove Camry2.5 battery connectors



For safety, first remove the battery minus connector and then the positive connector. Use 10mm spanner.-

(2) Remove Camry2.5 engine design cover



There are three grommets holding the engine cover. Just pull off the cover gently.-



Engine cover grommets located front center-




Engine cover grommets located rear left-



Engine cover grommets located rear right-

(3) Remove Camry2.5 coil packs

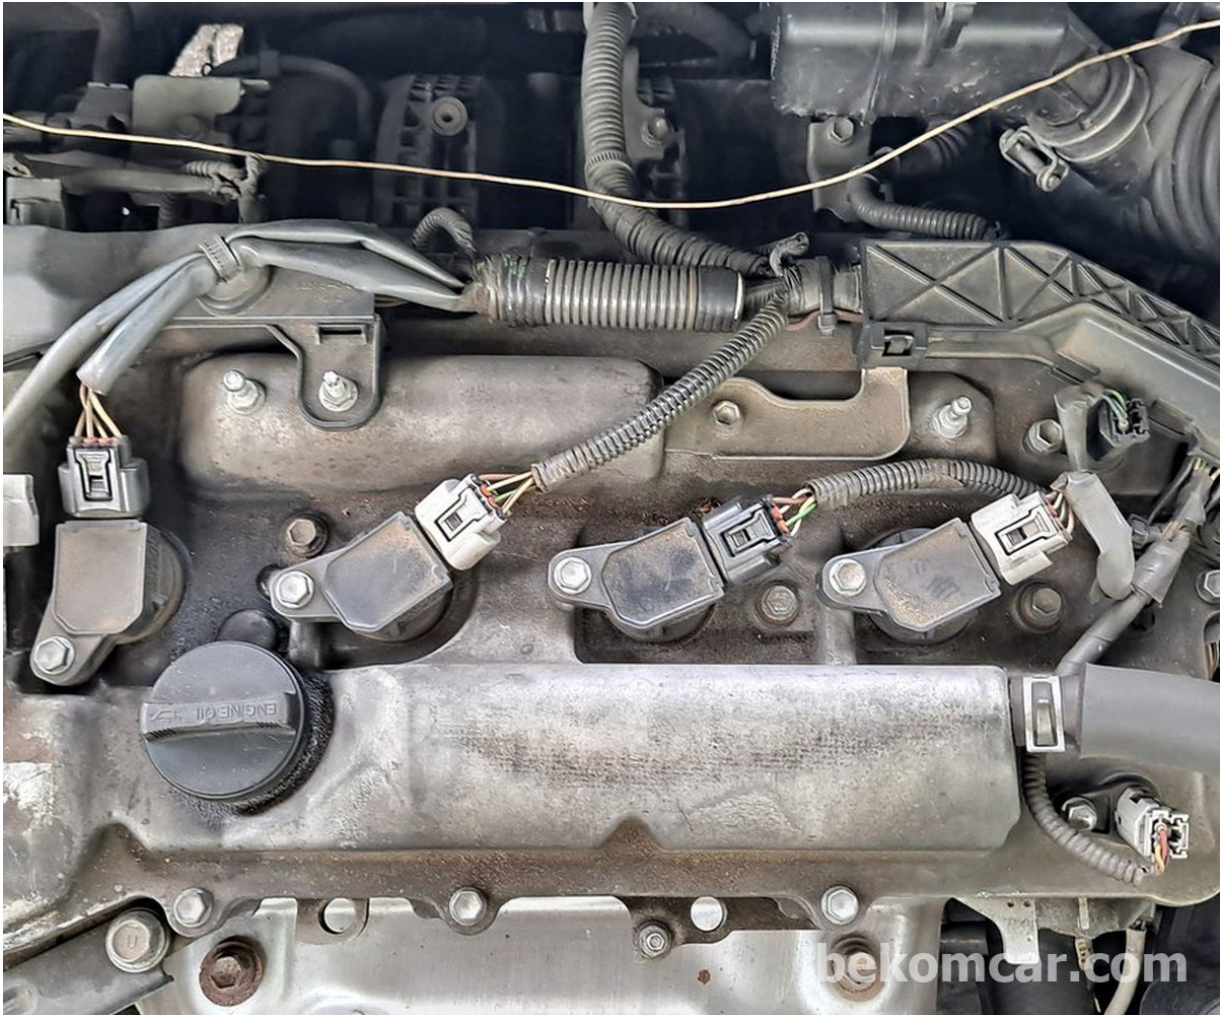

The first and third black connector tips are quite fragile. Remove 10mm bolts that hold the coil packs.-



Pull off the coil packs gently. There are four coil packs. Just wiggle around to pull off the coil packs.-



Remove all four coil packs and do visual inspection of the coils if there are any contaminants.-

(4) Remove Camry2.5 spark plugs



Remove the spark plugs after removing the coil pack. Use 16mm spark plug socket with 3/8" or 1/2" ratchets.-



Check the spark plug electrode, any oil, carbon powder, and other contaminants.-



After removing all the spark plugs, get new spark plugs ready for the installation.-

(5) Installing Camry2.5 spark plugs



Make sure the new spark plugs are the same as the installed one.-



Using magnetic spark plug socket, gently insert the spark plug, snug the plug. Repeat this for all four spark plugs.-



Using the torque wrench, torque the spark plug to 19Nm (14lbs ft). Do not over tighten the spark plugs. No anti seize lubrication is needed.-



Then insert all the four coil packs gently. Ensure you hear 'click' sound when inserting the coil packs. Tighten the 10mm bolts. Just snug the bolts.-

(6) Finish Camry2.5 spark plug replacement

 



Put back the engine design cover. Just put the cover matching each corner, matching the grommets. Gently push the design cover to be seated firmly.-

References


1. <https://www.youtube.com/watch?v=IAb9b3Hrea0>, The Car Care Nut, A Toyota Master Diagnostic Technician
2. <https://www.youtube.com/watch?v=ONSVIILWGnQ>
3. https://www.youtube.com/watch?v=CTh8O6_0szc
4. <https://www.youtube.com/watch?v=I5196OGzeME>

Related contents & Comments

1.  점화플러그 교체시, 전용소켓사용 어려울때 대안
2.  8세대 시빅하이브리드 1.3 점화플러그 및 점화코일 교체

특히 검정색 코일 콘넥터 분리시 대책이 없다. 그냥 부러진다. 그래서 콘넥터를 분리하지 않고 점화플러그를 교체해야 한다. 상당히 당황스러운게, 그냥 가볍게 누르면 가볍게 툭 하고 부러진다. 검정색만 그렇다. 회색은 멀쩡하다. 이건 비슷한 연식의 도요타 차량에서 공통으로 나타는 현상이다. 콘넥터 공급업체의 불량품이라고 생각한다. .

Jan. 10, 2022, 2:42 p.m., #C160, (@sunjoo.moon)

 SunJoo Moon , Edit Date: Aug. 25, 2021, 11:32 a.m.

⚠Disclaimer ! All cars are different, so please read the service manual for your vehicle before any repair work. bekomcar assumes no liability for property damage and/or injury incurred directly and/or indirectly as a result of any of the information contained in the website. Use this information at your own risk.